

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

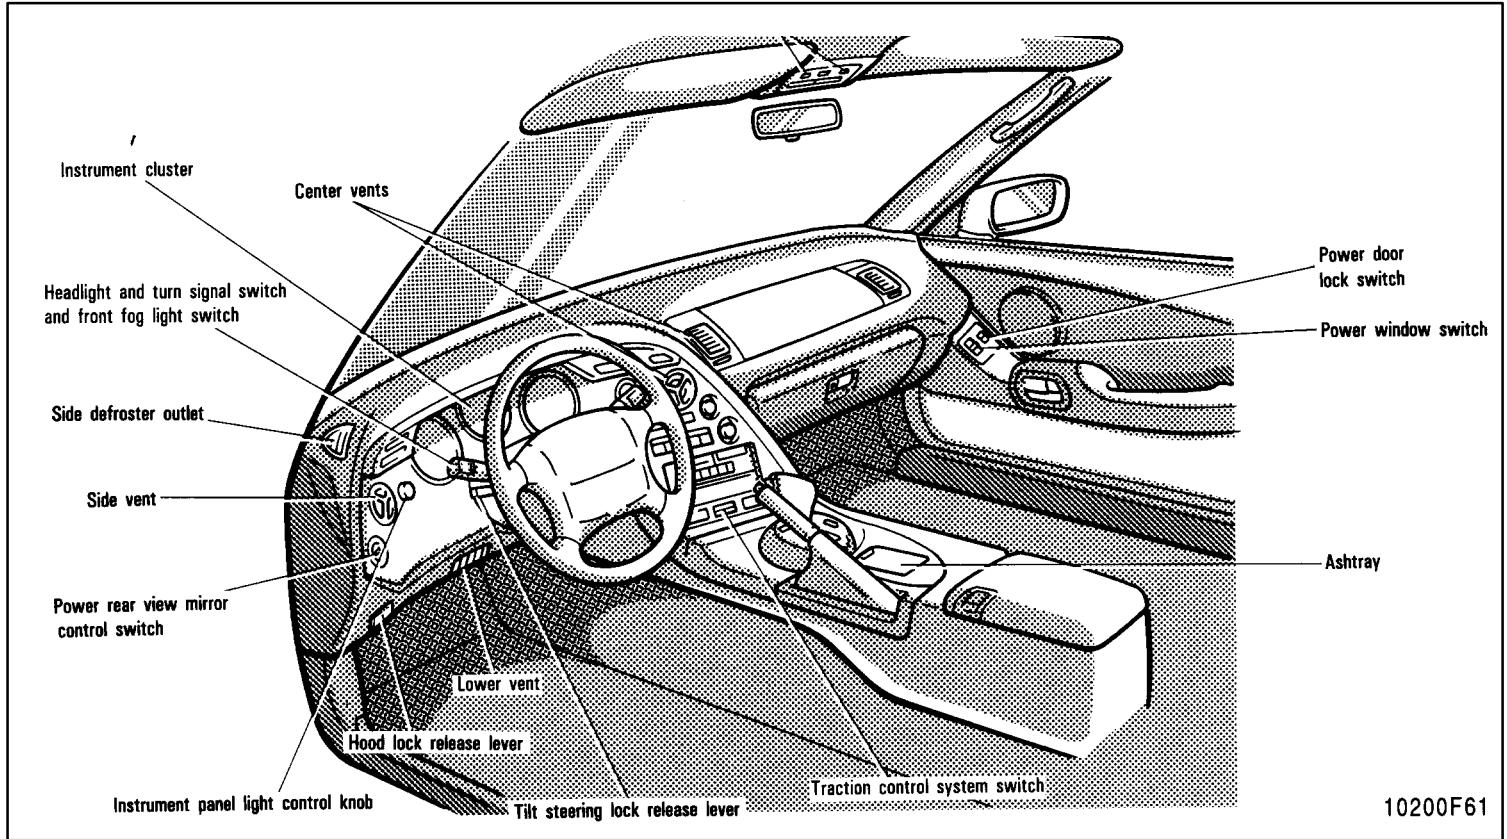


10200F61

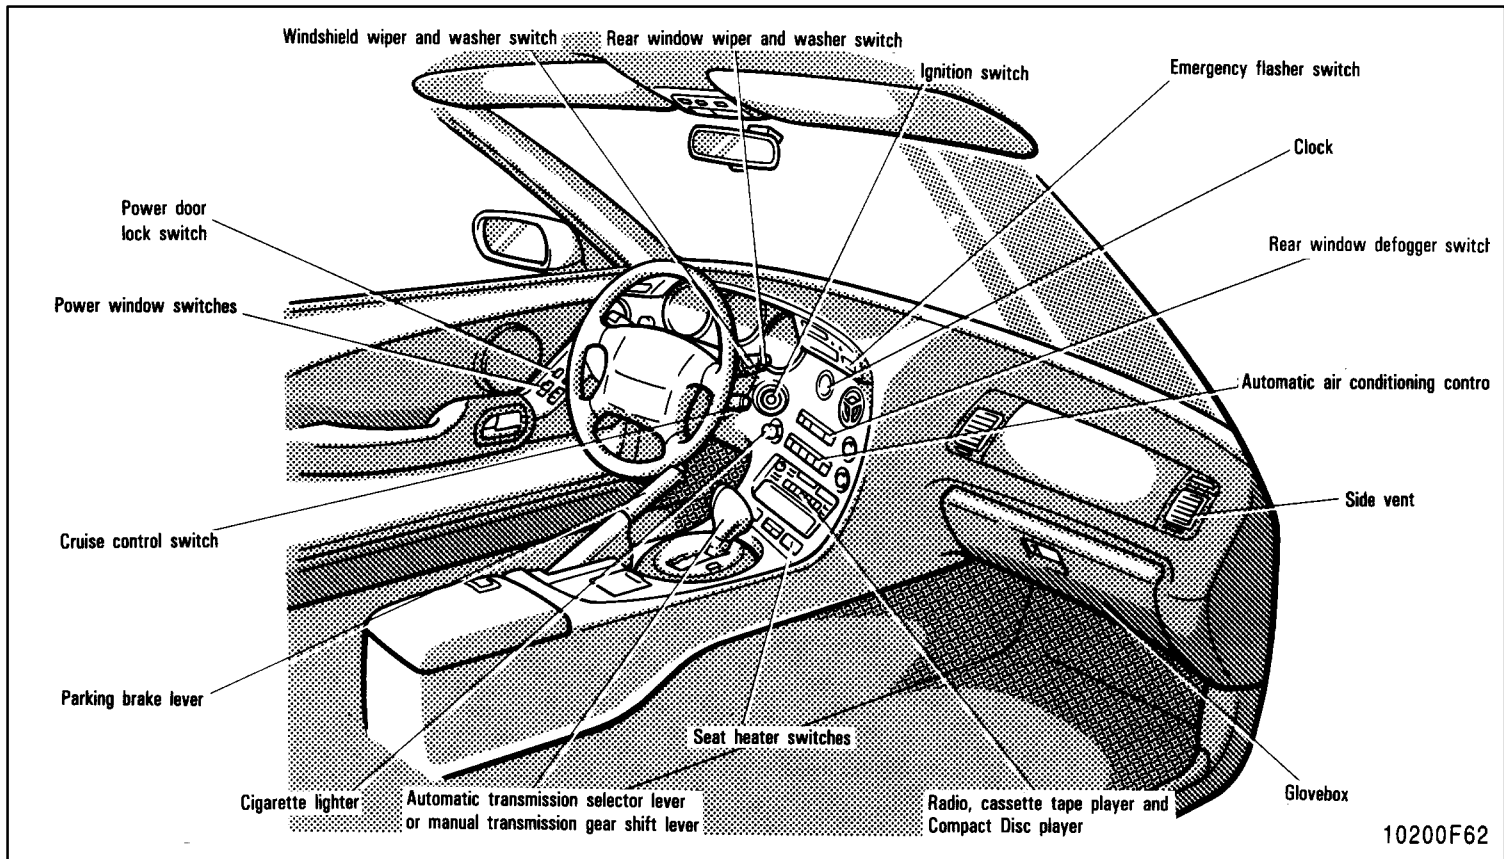





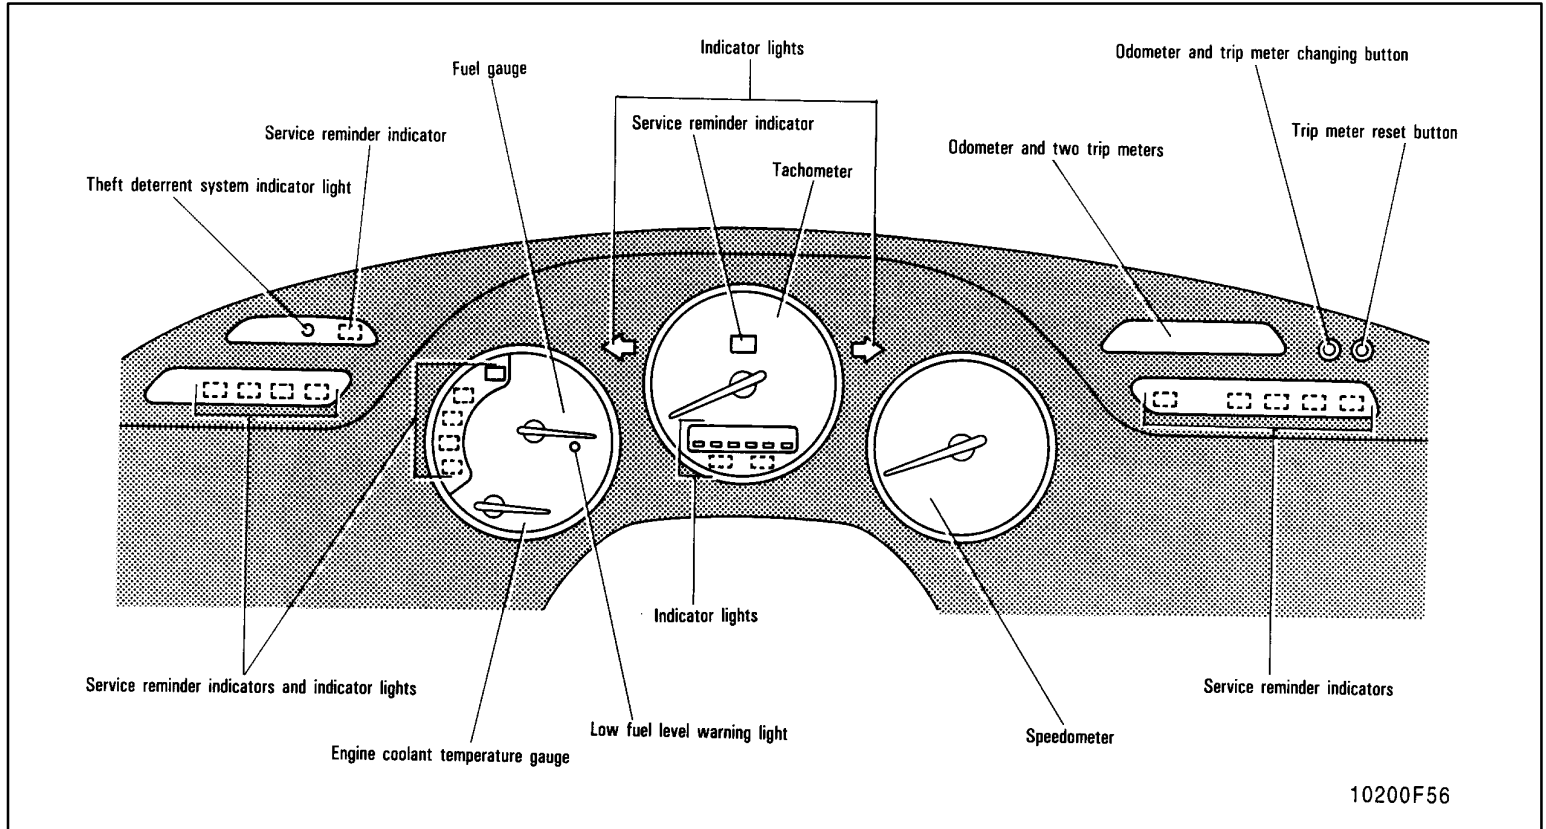


10200F62






Instrument cluster overview





10200F56

Indicator symbols on the instrument panel

	Master warning light *1
BRAKE (type A)  (type B)	Brake system warning light *1
	Seat belt reminder light*1
	Discharge warning light*1
	Malfunction indicator light*1
	Low oil pressure warning light*1
	Low engine oil level warning light*1

ABS (type A)  (type B)	Anti-lock brake system warning light *1
	Open door warning light*1
	Rear light failure warning light*1
	SRS airbag warning light*1
TRAC OFF	Traction control system off indicator/ warning light*1
	Slip indicator light
SNOW	Snow mode indicator light

 	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
MANU	Automatic transmission manual mode indicator light *2
PRN D 2 L	Automatic transmission indicator lights
CRUISE	Cruise control indicator light *3

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*2: If this light flashes, see “Automatic transmission” in Chapter 1-6.

*3 If this light flashes, see “Cruise control” in Chapter 1-6.